

# Foot pedal adjustment




## REQUIRED TOOLS

1. Allen wrench 5/32
2. Phillips screw driver



Make sure the pedal is in the stop position and the power is on

## Adjusting Potentiometer:

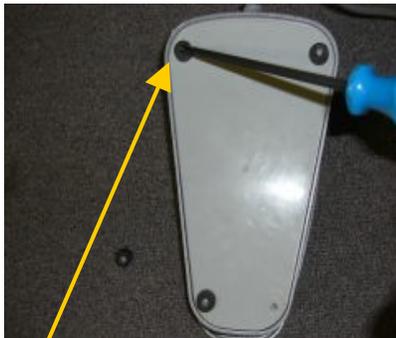


1. Unscrew the 4 feet using the Phillips screwdriver




2. Remove the cover and Make sure the pedal is in the stop position and the power is on



3. Loosen the two screws connecting the potentiometer bracket to the foot pedal housing

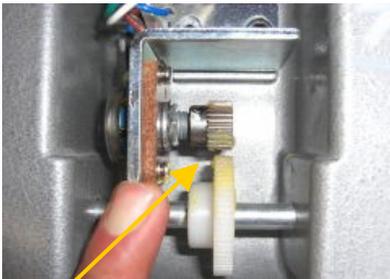

4. Move the potentiometer (silver gear) away from the white plastic gear so they are not touching

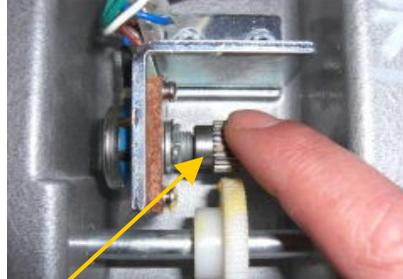

5. Turn the potentiometer until the wheel head starts to turn, then turn it the opposite way until the wheel head stops.



6. When the wheel head stops, slide the potentiometer up against the white gear and tighten the screws that hold the bracket back down. Then replace the cover and 4 feet. Your wheel should now be running from stop to 250 rpm.