

How to adjust VL-Whisper foot pedal tension



**Tool Required:
M-13 Wrench**




New Type Pedal



Old Type Pedal


New Type Pedal

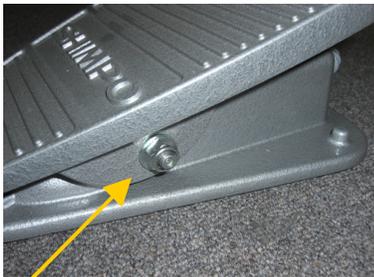

Use on the right side of the pedal
a M13 wrench



Adjust the U-nut to change
the tension of the foot pedal.

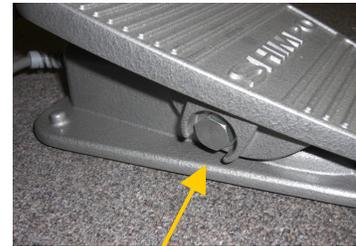

Caution

**Do not try to unscrew the
bolt on the left side (M17
bolt)**


Old Type Pedal



Loosen the outer bolt first,
then the inner bolt



Then loosen the inner bolt until
foot pedal tension is correct

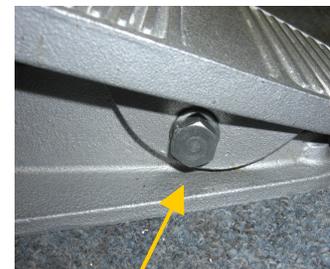

Caution

**Do not try to unscrew the
bolt on the left side (M17
bolt)**