How to replaced the potentiometer



REQUIRED TOOLS 1.Allen wench 5/32 2.Phillips screw driver



Part #: ARKA3500030 Potentiometer




1.Unscrew the 4 feet using the Phillips screwdriver




2.Remove the cover and unplug the three wire



3.Unscrew the two bolts potentiometer bracket to the foot pedal housing

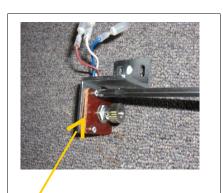

4.Unscrews the two screws then install new potentiometer

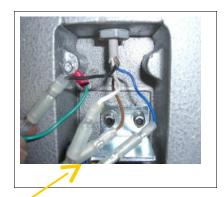

5.Conecting the 3 wires (same color)
Blue to Blue
White to White
Brown to Brown




5.Make sure the pedal is in the stop position and the power is on

Adjusting Potentiometer




6.Loosen the two screws connecting the potentiometer bracket to the foot pedal housing

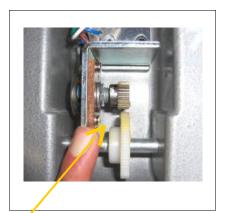

4. Move the potentiometer (silver gear) away from the white plastic gear so they are not touching



5. Turn the potentiometer until the wheel head starts to turn, then turn it the opposite way until the wheel head stops.

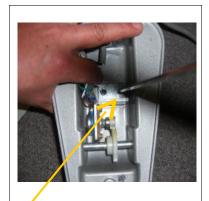

6. When the wheel head stops, slide the potentiometer up against the white gear and tighten the screws that hold the bracket back down. Then replace the cover and 4 feet. Your wheel should now be running from stop to 250 rpm.